



### EXTERIOR OF BUILDING

1. SET END CAP FLASHING IN PLACE
2. APPLY AN AMPLE AMOUNT OF CAULK ON INTERIOR OF CAP GUTTER AND FASTEN FIRST RIDGE VENT TO CAP
3. SET RIDGE VENT IN PLACE
4. APPLY AN AMPLE AMOUNT OF CAULK ON INTERIOR OF MULTIPLE VENT FLASHING GUTTER AND SET SECOND RIDGE VENT

### INTERIOR OF BUILDING

5. CLOSE VENT THAT HAS CHAIN OPERATOR
6. DETACH COUNTER BALANCE SPRING ON ALL OTHER VENTS SO THEY FALL SHUT
7. JOIN VENTS WITH A TURNBUCKLE USING 1/4" BOLTS
8. REATTACH EXTENSION SPRINGS

**R & S SALES  
COMPANY INC.**  
3575 Old Conejo Rd.  
Newbury Park, CA 91320  
(805)375-3980  
fax 375-3981

Description

### RV INSTALLATION DETAILS FOR CONTINUOUS VENTS

PANEL TYPE

Material

Scale

NTS

ORDER #

Date

12/18/08